

Change the volume – Long press to change the volume under playing mode.
(Not active while Talking on the Phone)

RED BUTTON (Working when S-150 is connected to a Bluetooth enabled phone.)
Re-dialing the last number – Under the playing mode, long press to re-dial the last dial-out number.

End or reject a call – Under the speaking mode, long press the RED button to end or reject a call.

VOICE SWITCH BUTTON

Transfer a call from S-150 to your cell phone – Under speaking mode; press once to transfer the call between BHF-2008 and your cell phone.


VOICE DIALING BUTTON

Voice activated dialing – Press once under speaking mode. (You cell phone must have this function)

NUMBER BUTTON


FM modulating – Inputting the FM channels you wanted, only used under the playing mode

The Icons on the screen

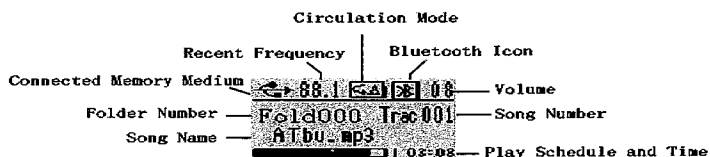

The display interface when playing the music from USB drive.

 Interface displayed on the screen under different status:



When the S-150 is powered on, the screen will display.

When connected to an external audio source through the Line-in connector, the screen will display.



When S-150 start pairing with your Bluetooth enabled phone, the screen will display.



When paired successfully, the screen displays.



When connected with Bluetooth enabled phone, without other external audio sources. The screen displays.



When connected with a Line-in device and a Bluetooth enabled phone, the screen displays.



When playing music from a USB drive, the screen displays.



When playing music from a SD card, the screen displays.



When connected to a Bluetooth enabled phone and playing the music from a USB drive, the screen displays.



When adjusting the volume, the screen displays the current volume.



When adjusting the song number, the screen displays the current song number.



When adjusting the FM channel, the screen displays the current frequency.



When pausing the music, the screen displays.



When adjusting the EQ mode, the screen displays the current EQ mode.



When adjusting the Circulation mode, the screen displays the current circulation mode.



When change to another folder, the screen displays the current folder number.



When inputting the FM channel by the number key on the remote control, the screen displays.



When choose a song by the number key on the remote control, the screen displays.



When using voice dialing, the screen displays. (You must have voice dialing function on your Cell phone.)



When playing music from your phone through Bluetooth, the screen displays.

Please noted: The S-150 will automatically connect with your cell phone after a power break, if you can not hear the other persons voice when speaking, please take out the S-150 from the cigar socket and plug it in again.